




# S-Class

Brief overview

Mercedes-Benz



## Cockpit – overview

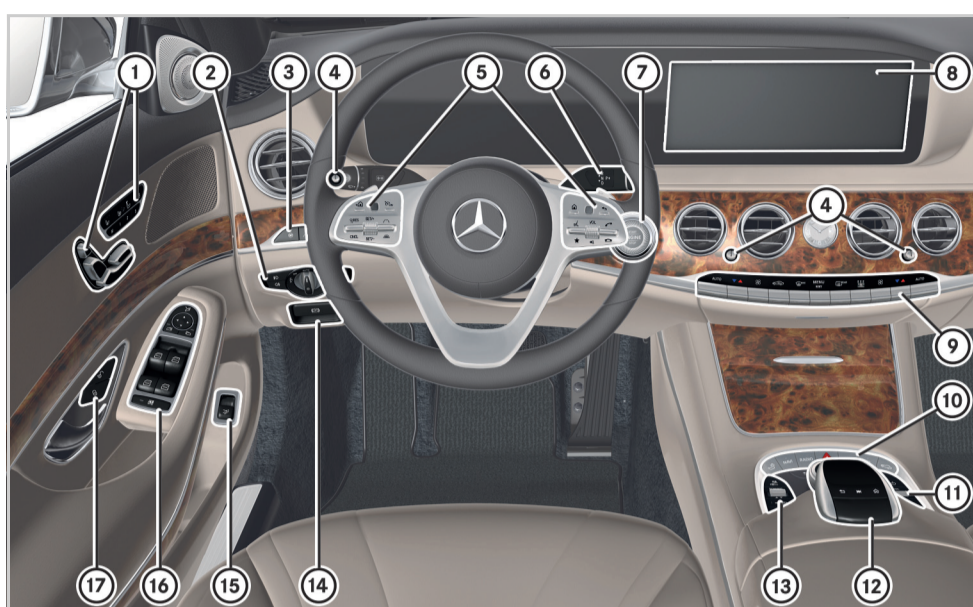

- ① **Seat functions**  
Adjusts the seat electrically
  - Seat heating
  - Seat ventilation
  - Adjusts the front-passenger seat
  - Memory function and presets  
**1 2 3**
- ② Light switch  
Adjusts the instrument lighting
- ③ **Driver assistance systems**
  - Active Steering Assist
  - Active Lane Keeping Assist
  - Night View Assist
  - Head-up display
  - Rear window roller sunblind
- ④ Adjusts the air vents:  
open or closed
- ⑤ Multifunction steering wheel control panels
- ⑥ DIRECT SELECT lever for transmission position

**⚠ WARNING** Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

## Cockpit – overview

- ⑦ Start/Stop button
- ⑧ Multimedia system display
- ⑨ Rocker switches for automatic climate control
- ⑩ **Multimedia system controller with**
  - Seats menu
  - Navigation menu
  - Radio menu
  - Media menu
  - Telephone menu
  - Vehicle menu
  - Back button
  - Shows main functions
  - Switches multimedia system on or off
  - Adjusts the volume  
Press: switches the sound on or off
  - Lowers or raises the head restraints in the rear compartment
  - Deactivates PARKTRONIC
- ⑪ **Door handle**
  - Locks the vehicle centrally
  - Unlocks the vehicle centrally

- ⑫ Multimedia system touchpad
- ⑬ **Driving functions**
  - ECO start/stop function
  - DYNAMIC SELECT
  - Vehicle level
  - Active Parking Assist
- ⑭ Electric parking brake
- ⑮ Opens or closes the trunk lid
- ⑯ Door control panel with controls for power windows, exterior mirror settings and the override feature for power windows and roller sunblinds for the side windows in the rear
- ⑰ **Door handle**
  - Locks the vehicle centrally
  - Unlocks the vehicle centrally



### Overhead control panel

- ① Buttons for interior lighting and reading light
- ② Button for Mercedes me connect\*
- ③ SOS button\* (Mercedes-Benz emergency call system)
- ④ Panoramic roof  
Front roller sunblind
- ⑤ MAGIC SKY CONTROL or  
Rear roller sunblind

\* Not available in all countries


Note that your vehicle may not be fitted with all features described.

## Lever on the steering wheel



### Overview

- ① Combination switch for turn signals, high-beam headlamps and windshield wipers
- ② Lever for electrical steering column adjustment and steering wheel heating

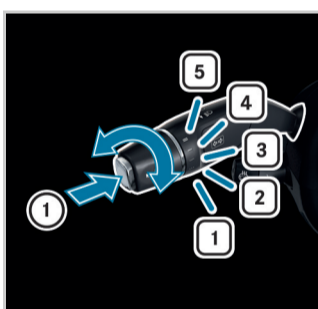

### Combination switch – windshield wiper functions

- ① Single wipe  
 Wipes with washer fluid
- ① **0** Windshield wipers off
- ② Intermittent wiping, normal
- ③ Intermittent wiping, frequent
- ④ Continuous wiping, slow
- ⑤ Continuous wiping, fast




### Combination switch – lighting functions

- ① High-beam headlamps or Adaptive Highbeam Assist Plus
- ② Turn signal, right
- ③ Headlamp flasher
- ④ Turn signal, left

**⚠ WARNING** Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

## Active Distance Assistant DISTRONIC

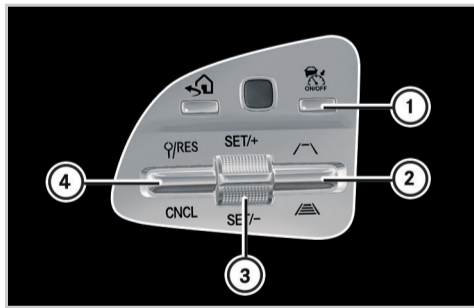

### Activating/deactivating

- ① Switches Active Distance Assist DISTRONIC on or off
- ③ Activates Active Distance Assist DISTRONIC with the current speed
- ④ Activates with the stored speed/pulls away with Active Distance Assist DISTRONIC
- Deactivates Active Distance Assist DISTRONIC



### Changing the speed/distance

- ② Increases the specified minimum distance
- Reduces the specified minimum distance
- ③ Increases the speed
- Reduces the speed

Active Distance Assist DISTRONIC maintains a constant speed which has been stored. The lowest speed that can be set is 12 mph (20 km/h).

You can change the set speed:

- ▶ **1 mph step (1 km/h):** Briefly press rocker switch ③ up or down.
- ▶ **5 mph step (10 km/h):** Press rocker switch ③ up or down beyond the pressure point.

Using rocker switch ②, you can change the specified minimum distance to the vehicle in front. The specified minimum distance depends on the currently driven speed.

If rocker switch ④ is pressed upwards twice, Distance Assist DISTRONIC is activated with the speed restriction displayed in the instrument cluster.

Note that your vehicle may not be fitted with all features described.

## Climate control



### Operating possibilities for climate control

You can set automatic climate control using:

- The rocker switches on control unit ① of the center console
- The climate control menu of the multimedia system

Air-conditioning function bar ② shows the most important settings and the status of automatic climate control.

### Automatic climate control panel

- Sets climate control to automatic mode
- Sets the temperature
- Sets the airflow  
At level 0: climate control off
- Air-recirculation mode  
The air in the vehicle interior is recirculated.  
In air-recirculation mode, the windows can fog up more quickly.
- Defrosts the windshield
- Calls up the climate control menu  
If you press and hold the **MENU** button for approximately 4 seconds, automatic climate control is reset to the basic settings.
- Defrosts the rear window
- Cooling with air dehumidification  
Residual heat with the engine off

### Climate control menu of the multimedia system

▶ **To call up the climate control menu:** press the **MENU** rocker switch on the control panel up or down.

- **A/C** – Activates/deactivates the cooling and air dehumidification functions of the automatic climate control
- **Climate Mode** – Changes the air flow
- **Air Distribution** – Sets the passenger air distribution for the front passenger
- **Footwell Temperature** – Adjusts the temperature for the footwell separately
- **Rear** – Operates the automatic climate control in the rear
- **SYNC** – Changes settings for all climate zones in the vehicle simultaneously
- **Ionization** – Freshens the air in the vehicle interior using ionization
- **Air Freshener** – Sets the intensity of the perfume atomizer





**Operating the menu of the on-board computer**

- ① Back button for the on-board computer
- ② Touch Control for the on-board computer

**Operating the multimedia system**

- ③ Main menu of the multimedia system
- ④ Touch Control for the multimedia system
- ⑤ Back button for the multimedia system
- ⑥ Accepts a telephone call  
 Rejects a telephone call  
Ends a call

- ⑦ Adjusts the volume  
Press: switches the sound on or off
- ⑧ Starts dialog with the Voice Control System or cancels the current Voice Control System voice command
- Displays favorites

**⚠ WARNING** Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

**Voice Control System**

**Starting a dialog**

The Voice Control System allows you to comfortably operate the majority of the multimedia system's functions.

▶ **To say a voice command:** press the button and speak a voice command after the signal tone.

**Voice Control System help functions**

- **General information:**  
Say the "Help Voice Control System" voice command.
- **Help for the current function:**  
Say the "Help" voice command.
- **Help for a specific system:**  
Say the voice command for the desired system, e.g. "Help telephone".

**Examples**

**Voice commands for Navigation**

- "Navigate to Woodward Avenue, Detroit"  
Starts route guidance to the named address.
- "Navigate to John Doe"  
Starts route guidance to a contact in the address book.
- "Nearest gas station"  
Further categories are also available: restaurant, car park and rest area.

**Voice commands for telephone**

- "Call Jane Doe"  
Calls the number of a contact in the address book.
- "Latest calls"  
Shows the latest calls.

**Voice commands for audio mode**

- "Station Z100"  
Calls up stations which are in range or stored stations.
- "Play Moonlight Sonata"  
Plays the named media file. All tracks available in the system can be used.

Note that your vehicle may not be fitted with all features described.

**Overview of the multimedia system**



You can operate the multimedia system with the controller, touchpad or Touch Control.

- ▶ **Controller:** turn or slide in the direction of the desired entry.
- ▶ Slide to the left or right in order to open a menu.
- ▶ Confirm your choice by pressing the controller.

- ▶ **Touchpad:** swipe in the direction of the desired entry.
- ▶ Swipe to the left or right in order to open a menu.
- ▶ Confirm your selection by pressing.

- Press briefly: returns to the previous display  
Press and hold: calls up main functions
- Calls up main functions
- Rapid access to audio sources

**⚠ WARNING** Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

**Favorites**

Favorites allow you to quickly call up applications which you use regularly.


- ▶ **To call up the menu:** press the button. The main functions are displayed.
- ▶ Navigate downwards. The favorites bar is shown.
- ▶ **To create your own favorite:** select the desired function in the multimedia system.
- ▶ Press and hold the button until the favorites are displayed.
- ▶ Add your own favorite at the desired position.

**Personalization**

You can store your own personal settings for the multimedia system in a user profile.


- ▶ **To call up the menu:** press the button.
- ▶ Select System Personalization.

**Operating the multimedia system**

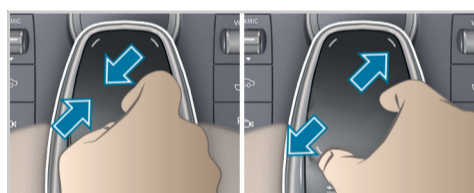

**Zooming the map**

- ▶ **Touchpad:** move two fingers apart or together.

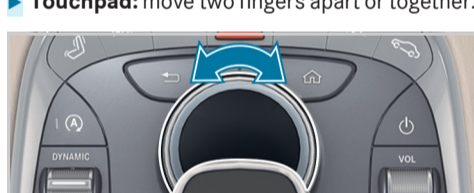


- ▶ **Controller:** turn left or right.



**Rapid access to audio sources**

Depending on the audio source to which you are currently listening, you can move to the next radio station or music track.

- ▶ **To open the access bar:** swipe up with two fingers.
- or
- ▶ Press the button on the touchpad.
- ▶ **To select the previous or next station/music track:** use one finger to swipe up or down.
- ▶ **To close the access bar:** swipe down with two fingers or press on the touchpad.

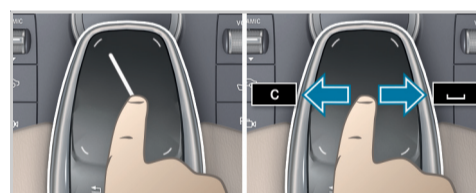

**Handwriting recognition**


- You can enter individual letters.
- ▶ **To delete** : swipe to the left.
- ▶ **To insert a space** : swipe to the right.

**Quickly storing radio stations**

- If you are listening to the radio and the Radio menu is shown in the multimedia system:
- ▶ Press and hold the controller or touchpad or the right-hand Touch Control on the multifunction steering wheel. A tone confirms the save.

Note that your vehicle may not be fitted with all features described.

**Establishing a Bluetooth® connection**

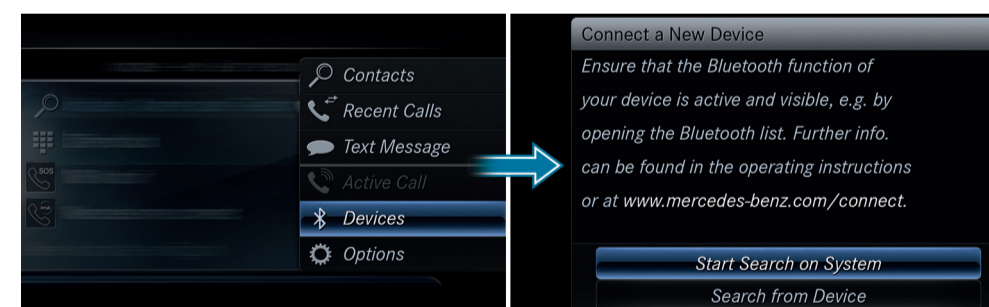

**Requirement**

- Bluetooth® is switched on on the mobile phone and visible for other devices (see the manufacturer's operating instructions).
- Bluetooth® is switched on on the multimedia system.

**Searching for a mobile phone**

- ▶ Press the button on the center console.
- ▶ Select **Devices** **Connect New Device**.
- or
- ▶ Select **Start Search on System**. The available devices are shown in the display. If your mobile phone is not found, select **Search from Device**.

**Connecting a mobile phone**

- ▶ Select the desired mobile phone. A code is displayed in the multimedia system and on the mobile phone.
- ▶ **If the codes match:** Confirm with **Yes** on the multimedia system.
- ▶ Confirm the code on the mobile phone.
- i** You can simultaneously connect two telephones with your system.

**Further information**

Detailed information on Bluetooth® connections with your mobile phone can be found at: [www.mercedes-benz.com/connect](http://www.mercedes-benz.com/connect)



**⚠ WARNING** Make sure that you read the entire Operator's Manual. Otherwise, you may not recognize dangers.

**Further information on your vehicle**

**Further information**

Obtain further information on your vehicle from: <http://www.mbusa.com>



How-to videos



Operator's Manuals



**Connecting external media sources**

- ① SD slot
- ② USB ports

The USB connection for Apple CarPlay™ and Android Auto™ is marked with the symbol.



**HANDS-FREE ACCESS**

If you carry the KEYLESS-GO key on your person, you will be detected by a sensor. Do not touch the bumper and maintain a distance of around 12 in (30 cm).

- ▶ **To open or close:** kick into the sensor detection area below the bumper.

Note that your vehicle may not be fitted with all features described.