



2135844015

Order no. P213 1368 13 Part no. 213 584 40 15  
Edition B2020



E-Class Sedan  
Mercedes-AMG Supplement

Mercedes-Benz



#### Publication details

##### Internet

Further information about Mercedes-Benz vehicles and about Daimler AG can be found on the following websites:

<http://www.mbusa.com> (USA only)

<http://www.mercedes-benz.ca> (Canada only)

##### Documentation team

©Daimler AG: not to be reprinted, translated or otherwise reproduced, in whole or in part, without written permission from Daimler AG.

##### Vehicle manufacturer

Daimler AG

Mercedesstrasse 137

70327 Stuttgart

Germany

As at 25.03.2019

## Thank you for purchasing a Mercedes-AMG

Before you first drive off, read this Operator's Manual carefully and familiarize yourself with your vehicle. For your own safety and a longer operating lifespan of the vehicle, follow the instructions and warning notices in this Operator's Manual. Disregarding them may lead to damage to the vehicle or injury to people.

Damage to the vehicle resulting from the disregard of the instructions is not covered by the Mercedes-Benz Limited Warranty.

The standard equipment or product description of your vehicle may vary and depends on the following factors:

- Model
- Order
- National version
- Availability

Mercedes-AMG reserves the right to introduce changes in the following areas:

- Design
- Equipment

- Technical features

The equipment in your vehicle may therefore differ from that shown in the descriptions and illustrations.

The following documents are integral parts of the vehicle:

- Digital Operator's Manual
- Printed Operator's Manual
- Maintenance Booklet
- Equipment-dependent Supplements

Keep these documents in the vehicle at all times. If you sell the vehicle, always pass all of the documents on to the new owner.

Mercedes-Benz USA, LLC  
Mercedes-Benz Canada, Inc.  
A Daimler Company

2135844015




---


<b>Symbols</b> .....	3	DYNAMIC SELECT switch .....	14	<b>Wheels and tires</b> .....	42
		Automatic transmission .....	16	Overview of the tire-change tool kit .....	42
		Driving and driving safety systems .....	18	Changing a wheel .....	42
		Function of the AMG steering-wheel buttons .....	29		
<b>At a glance</b> .....	4			<b>Technical data</b> .....	44
Cockpit .....	4			Operating fluids .....	44
				Vehicle data .....	46
<b>General notes</b> .....	7	<b>Instrument Display and on-board computer</b> .....	30		
Operator's Manual .....	7	Notes on the Instrument Display and on-board computer .....	30	<b>Display messages and warning/indicator lamps</b> .....	48
Operating safety .....	7	Operating the on-board computer .....	30	Display messages .....	48
Qualified specialist workshop .....	8	Calling up displays on the Performance menu .....	32	Warning and indicator lamps .....	49
Correct use of the vehicle .....	9	Displaying and starting RACE TIMER on the Performance menu .....	33		
Limited Warranty .....	9	Function of the Head-up Display .....	34	<b>Index</b> .....	52
<b>Occupant safety</b> .....	10	<b>Multimedia system</b> .....	36		
Seat belts .....	10	AMG TRACK PACE .....	36		
Airbags .....	10				
		<b>Breakdown assistance</b> .....	41		
<b>Seats</b> .....	11	Flat tire .....	41		
Adjusting the AMG Performance seat .....	11				
<b>Driving and parking</b> .....	12				
Driving .....	12				


---

In this Operator's Manual, you will find the following symbols:

 **DANGER** Danger due to not observing the warning notices


Warning notices draw your attention to hazards that may endanger your health or life, or the health or life of others.

 Observe the warning notices.


 **ENVIRONMENTAL NOTE** Environmental damage due to failure to observe environmental notes


Environmental notes include information on environmentally responsible behavior or environmentally responsible disposal.

 Observe environmental notes.

 **NOTE** Damage to property due to failure to observe notes on material damage

Notes on material damage inform you of risks which may lead to your vehicle being damaged.

 Observe notes on material damage.

 Useful instructions or further information that could be helpful to you.

 Instruction

( → page) Further information on a topic

**Display** Information on the multifunction display/media display




Highest menu level, which is to be selected in the multimedia system



Corresponding submenus, which are to be selected in the multimedia system

\*

Marks a cause

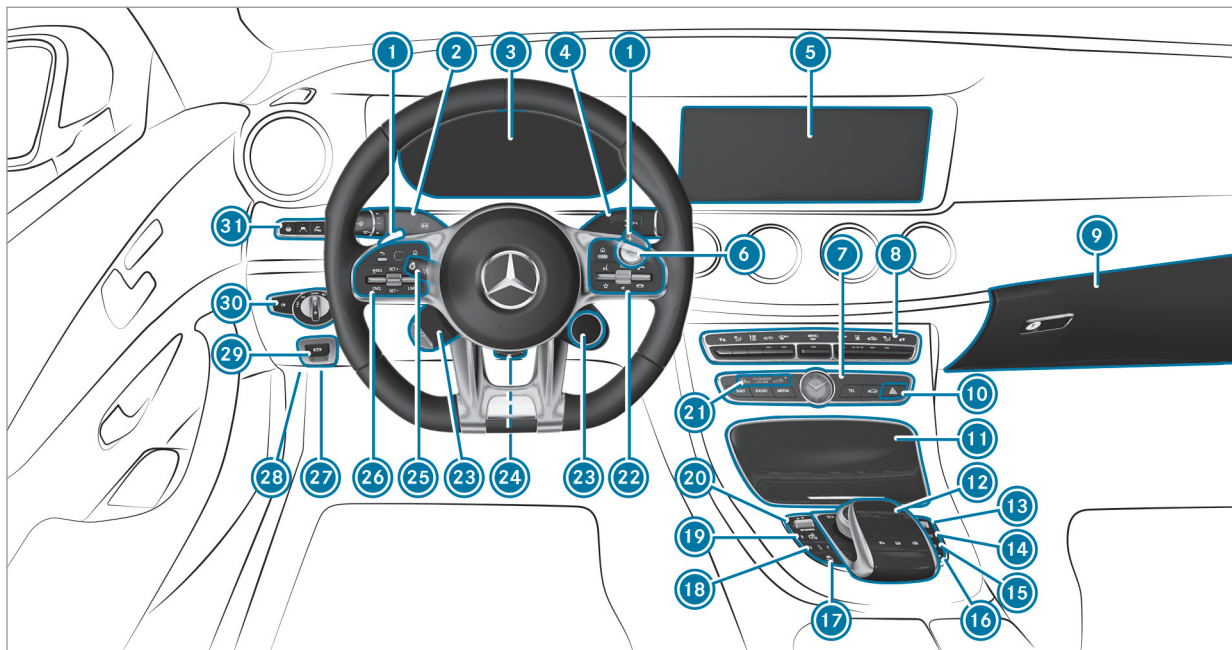

Left-hand drive vehicles

① Steering wheel gearshift paddles	→	16	①⑦ ESP®	→	18
② Combination switch			①⑧ AMG adaptive sport suspension system	→	24
③ Instrument Display			①⑨ Manual gearshifting	→	16
④ DIRECT SELECT lever			①⑩ DYNAMIC SELECT switch	→	14
⑤ Media display			①⑪ PASSENGER AIR BAG indicator lamp		
⑥ Start/stop button	→	12	①⑫ Control panel for multimedia system		
⑦ Calls up the main functions			①⑬ AMG steering-wheel buttons	→	29
⑧ Climate control systems			①⑭ Adjusts the steering wheel mechanically		
⑨ Glove box			①⑮ Adjusts the steering wheel electrically		
⑩ Hazard warning lights			Switches the steering wheel heater on/off		
⑪ Stowage compartment			①⑯ Operating group:		
⑫ Touchpad			On-board computer		
⑬ Control knob for volume and switching sound on/off			Cruise control		
⑭ AMG Performance exhaust system	→	14	Active Distance Assist DISTRONIC		
⑮ ECO start/stop function	→	13	①⑰ Diagnostics connection		
⑯ Active Parking Assist			①⑱ Opens the hood		
			①⑲ Electric parking brake		

## 6 At a glance – Cockpit

---

30 Light switch

31 Control panel for:

Active Steering Assist

Active Lane Keeping Assist

Parking Assist PARKTRONIC

Head-up Display

→

34

Rear-window roller sunblind

Sets the vehicle level



### Operator's Manual

This Supplement provides information on all the important functions of your AMG vehicle that are either not described or differ from the descriptions in the vehicle Operator's Manual. This information supplements or replaces the corresponding sections in the vehicle Operator's Manual. Under no circumstances does the Supplement replace the Operator's Manual.

This Supplement describes all models, and standard and optional equipment for your vehicle, as available at the time of going to press. Country-specific differences are possible. Bear in mind that your vehicle may not feature all functions described here. This is also the case for systems and functions relevant to safety. Therefore, the equipment on your vehicle may differ from that in the descriptions and illustrations.

The original purchase contract documentation for your vehicle contains a list of all of the systems in your vehicle.

Should you have any questions concerning equipment and operation, please consult an authorized Mercedes-Benz Center.

The Operator's Manual, the Supplement and the Maintenance Booklet are important documents and should be kept in the vehicle.

### Operating safety

**▲ WARNING** Risk of accident due to malfunctions or system failures

If you do not have the prescribed service/maintenance work or any required repairs carried out, this could result in malfunctions or system failures.

- ▶ Always have the prescribed service/maintenance work as well any required repairs carried out at a qualified specialist workshop.

**▲ WARNING** Risk of accident and injury as a result of incorrect modifications to electronic component parts

Modification to electronic components, their software or wiring could impair their function and/or the function of other networked component parts. In particular, systems relevant to safety could also be affected.

As a result, they may no longer function as intended and/or endanger the operating safety of the vehicle.

- ▶ Never tamper with the wiring and electronic component parts or their software.
- ▶ You should have all work on electrical and electronic components carried out at a qualified specialist workshop.

Observe the "On-board electronics" section in "Technical data" in the vehicle Operator's Manual.

**⚠ WARNING** Risk of fire due to flammable materials on hot parts of the exhaust system

Flammable material such as leaves, grass or twigs may ignite if they come into contact with hot parts of the exhaust system.

- ▶ When driving on unpaved roads or off-road, regularly check the vehicle underside.
- ▶ Remove trapped plants or other flammable material.
- ▶ If there is damage, consult a qualified specialist workshop immediately.

**! NOTE** Damage to the vehicle

In the following situations, in particular, there is a risk of damage to the vehicle:

- The vehicle becomes grounded, e.g. on a high curb or an unpaved road

- The vehicle is driven too fast over an obstacle, e.g. a curb, speed bump or pothole
- A heavy object strikes the underbody or chassis components

In situations such as this, the body, the underbody, chassis components, wheels or tires could be damaged without the damage being visible. Components damaged in this way can unexpectedly fail or, in the case of an accident, may not absorb the loads that arise as intended.

If the underbody paneling is damaged, flammable materials such as leaves, grass or twigs can collect between the underbody and the underbody paneling. These materials may ignite if they come into contact with hot parts on the exhaust system.

- ▶ Have the vehicle checked and repaired immediately at a qualified specialist workshop.

or

- ▶ If driving safety is impaired while continuing your journey, pull over and stop the vehicle immediately in accordance with the traffic conditions, and contact a qualified specialist workshop.

### Qualified specialist workshop

An authorized Mercedes-Benz Center is a qualified specialist workshop. It has the necessary special skills, tools and qualifications to correctly carry out the work required on your vehicle. This particularly applies to safety-relevant works.

Always have the following work carried out on your vehicle at a qualified specialist workshop:

- Safety-relevant works
- Service and maintenance work
- Repair work
- Modifications as well as installations and conversions
- Work on electronic components

Mercedes-AMG recommends a Mercedes-Benz service center.

### Correct use of the vehicle

If you remove any warning stickers, you or others could fail to recognize certain dangers. Leave warning stickers in position.

Observe the following information in particular when driving your vehicle:

- the safety notes in this manual
- technical data for the vehicle
- traffic rules and regulations
- laws and safety standards pertaining to motor vehicles

### Limited Warranty

**!** **NOTE** Damage to the vehicle arising from violation of these operating instructions.

Damage to the vehicle can arise from violation of these operating instructions.

This damage is not covered either by the Mercedes-Benz implied warranty or by the New- or Used-Vehicle Warranty.

- ▶ Follow the instructions in these operating instructions on proper operation of your vehicle as well as on possible vehicle damage.

### Seat belts

#### Reduced protection

The AMG sport seat and the AMG Performance seat are designed for the standard three-point seat belt. If you install a different multipoint seat belt, e.g. sport or racing seat belts, the restraint system cannot provide the intended level of protection.

Depending on the type of seat, there may be openings in the seat backrest. These openings have no function.

**⚠ WARNING** Risk of injury or fatal injury due to modified seat belt systems

If you feed seat belts through the opening in the seat backrest, the seat backrest may be damaged or may even break in the event of an accident.

- ▶ Only use the standard three-point seat belt.
- ▶ Never modify the seat belt system.

### Airbags


#### Protection offered by the side airbag

**Vehicles with AMG Performance seat:** depending on the accident situation, the side airbag can increase the level of protection for the ribcage of the respective passenger in addition to a correctly fastened seat belt.

### Adjusting the AMG Performance seat

To adjust the contour of the seat and for improved lateral support, you can adjust the front seats individually.

On the front passenger seat, you can adjust only the seat side bolsters of the seat backrest.

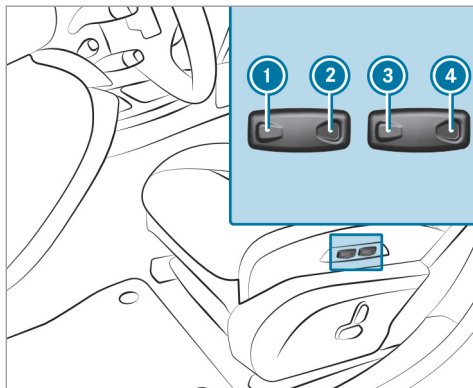

▶ **To adjust the seat side bolsters of the seat cushion:** press button ① (narrower) or ② (wider).

▶ **To adjust the seat side bolsters of the seat backrest:** press button ③ (narrower) or ④ (wider).

### Driving

#### Breaking-in notes

To preserve the engine during the first 1,000 miles (1,500 km):


- drive at varying road speeds and engine speeds.
- do not drive faster than 85 mph (140 km/h).
- allow the engine to reach a maximum engine speed of 4,500 rpm (4,500 rpm) only briefly.
- drive the vehicle in drive program **[C]**.
- change gear before the tachometer needle is  $\frac{2}{3}$  of the way to the red area of the tachometer.
- do not shift down a gear manually in order to brake.
- avoid overstraining the vehicle, e.g. driving at full throttle.
- do not depress the accelerator pedal past the pressure point (kickdown).
- only increase the engine speed gradually and accelerate the vehicle to full speed after 1,000 miles (1,500 km).

This also applies when the engine or parts of the drivetrain have been replaced.

Please also observe the following breaking-in notes:

- In certain driving and driving safety systems, the sensors adjust automatically while a certain distance is being driven after the vehicle has been delivered or after repairs. Full system effectiveness is not reached until the end of this teach-in process.
- Brakepads, brake discs and tires that are either new or have been replaced only achieve optimum braking effect and grip after several hundred kilometers of driving. Compensate for the reduced braking effect by applying greater force to the brake pedal.

#### Function of Emotion Start

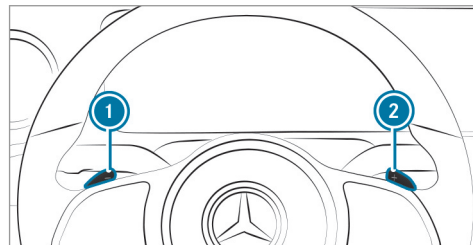

- ▶ Start the vehicle with the start/stop button and simultaneously pull one of steering wheel gearshift paddles **1** or **2**.
  - The idle speed is increased briefly when starting the engine.
  - The exhaust gas flaps are opened (sporty characteristic) (→ page 13).

Observe the notes on starting the vehicle in the vehicle Operator's Manual.

### Notes on the locking differential

After a breaking-in period of 2000 miles (3000 km) the oil on the locking differential should be changed in a qualified specialist workshop. This oil change prolongs the service life of the locking differential.

Be sure to observe the information sticker regarding the breaking-in notes on the windshield.

### Operation of the ECO start/stop function

The engine is switched off automatically in the following situations if all vehicle conditions for an automatic engine stop are met:

- You brake the vehicle to a standstill in transmission position **D** or **N**.

If you switch on the HOLD function in transmission position **D** or **N**, the engine will automatically stop in the following situations:

- You stop behind a vehicle that is pulling away.

- You stop at a stop sign when there is no vehicle in front of you.
- You turn the steering wheel hard at a low speed.
- ⓘ In transmission position **R**, the engine is not switched off automatically even when the HOLD function is switched on.

The engine is restarted automatically if:

- You release the brake pedal in transmission position **D** when the HOLD function is not active and the vehicle does not start to move.
- You shift from transmission position **P**.
- You release the brake pedal and the vehicle starts to move on a gentle downhill gradient at a speed below 3 mph (5 km/h).
- You depress the accelerator pedal.
- You permanently activate manual gearshifting.
- You pull the left-hand steering wheel gearshift paddle.
- An automatic engine start is necessary.

If the engine was switched off by the ECO start/stop function and you leave the vehicle, a warning tone sounds. The **Vehicle Ready to Drive Switch the Ignition Off Before Exiting** display message also appears in the multifunction display. If you do not switch off the ignition, the ignition is automatically switched off after one minute.


### AMG Performance exhaust system

#### Function of the AMG Performance exhaust system

Changing the position of the exhaust gas flaps allows you to select the sound characteristics of the AMG Performance exhaust system:

- Closed exhaust gas flaps: comfort characteristic (balanced)
- Open exhaust gas flaps: sporty characteristic (powerful)

## Operating the AMG Performance exhaust system

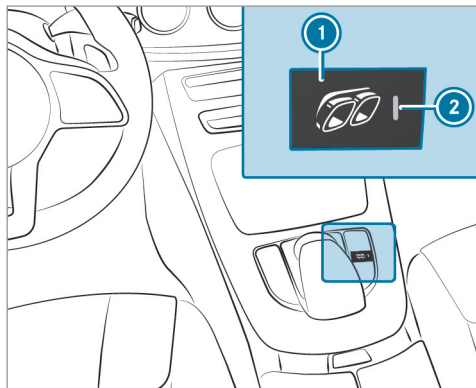

- ▶ Press button ①.  
The sporty characteristic (Powerful) is selected when indicator lamp ② lights up.

## Information on the AMG ceramic high-performance composite brake system

The brake system is designed for heavy loads. This may lead to noise when braking. This effect can also occur after washing the vehicle.

The noise depends on the following factors:

- Speed
- Brake force
- Environmental conditions, e.g. temperature and air humidity






- ① Have the brake system checked at a qualified specialist workshop after it has been subjected to extreme loads.


## DYNAMIC SELECT switch

### Function of the DYNAMIC SELECT switch

- ① This chapter describes the function of the DYNAMIC SELECT switch for the **Mercedes-AMG E 53 4MATIC+**.

Use the DYNAMIC SELECT switch to change between the following drive programs:

-  **(Slippery):** optimized pulling away and driving characteristics in wintry and slippery road conditions
-  **(Individual):** individual settings
-  **(Comfort):** comfortable and economical driving style
-  **(Sport):** sporty driving style
-  **(Sport +):** particularly sporty driving style

Mercedes-AMG recommends selecting the drive program  when in city traffic or stop-and-go traffic.

Depending on the drive program selected, the following vehicle characteristics will change:

- Drive:
  - Engine and transmission management
  - Active Distance Assist DISTRONIC
- ESP®
- Availability of the ECO start/stop function
- Suspension:










- Position of the exhaust gas flaps
  - Steering
  - Availability of glide mode
- i** You can also change the following vehicle characteristics using the buttons in the center console:
- Position of the exhaust gas flaps
  - Suspension
  - ESP®
  - Availability of the ECO start/stop function


### Function of the DYNAMIC SELECT switch

- i** This chapter describes the function of the DYNAMIC SELECT switch for the **Mercedes-AMG E 63 4MATIC+ and E 63 S 4MATIC+**.

Use the DYNAMIC SELECT switch to change between the following drive programs:


-  **(Slippery)**: optimized pulling away and driving characteristics in wintry and slippery road conditions
-  **(Individual)**: individual settings
-  **(Comfort)**: comfortable and economical driving style
-  **(Sport)**: sporty driving style
-  **(Sport +)**: particularly sporty driving style
-  **(RACE)**: driving like on a race track (Mercedes-AMG E 63 S)

The  **(RACE)** drive program may not be used on normal roads.  **(RACE)** must only be activated and used on dedicated race circuits, not on public roads.

Mercedes-AMG recommends selecting the drive program  when in city traffic or stop-and-go traffic.

Depending on the drive program selected, the following vehicle characteristics will change:

- Drive:

- Engine and transmission management
- Active Distance Assist DISTRONIC
- ESP®
- Availability of the ECO start/stop function
- Position of the exhaust gas flaps
- Suspension
- Steering
- The  **(RACE)** drive program has the following properties:
  - The vehicle exhibits driving characteristics suited for race circuits.
  - All vehicle systems are designed for maximum sportiness.
  - The suspension has a particularly tight suspension and damping system.
  - Glide mode is not available.
  - The sporty characteristic (Powerful) is activated when the exhaust system is activated.

**i** You can change the following vehicle characteristics using the buttons in the center console:

- Position of the exhaust gas flaps
- Suspension
- ESP®
- Availability of the ECO start/stop function

### Displaying dynamic data

Multimedia system:

→ Vehicle →  DYNAMIC SELECT


▶ Select **Dyn. Data.**

Dynamic data is displayed, e.g.:

- G-force values
- Torque distribution
- Boost
- Current power output
- Variable all-wheel drive

### Automatic transmission

#### Manual gearshifting

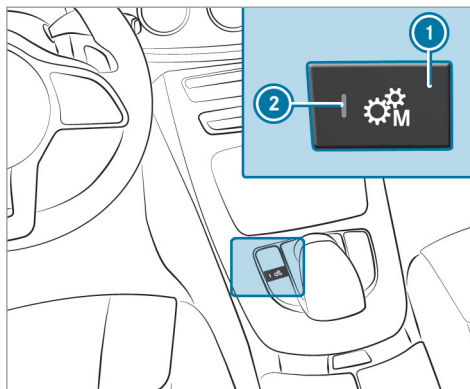

▶ **To activate/deactivate:** press button **1**. If indicator lamp **2** is lit, manual gearshifting is activated. The current gear is displayed in the multifunction display.

**i** To permanently shift the gears manually in drive program  using the steering wheel


gearshift paddles, select the **M** (Manual) setting for the transmission.

**!** **NOTE** Damage to the engine due to shifting up too late


The automatic transmission does not shift up in manual mode even when the engine's limiting speed is reached.

The fuel supply is interrupted in order to prevent the engine from overrevving.

▶ Shift up before the engine speed reaches the red area in the tachometer.

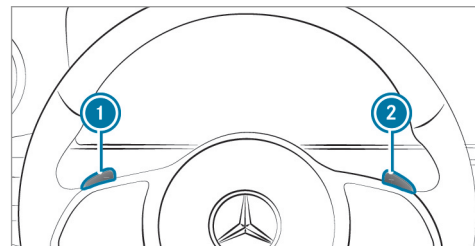


- ▶ **To shift up:** pull steering wheel gearshift paddle ②.
- ▶ **To shift down:** pull steering wheel gearshift paddle ①.

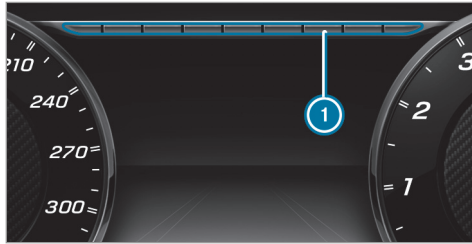

If the engine speed is too high or too low, you cannot change gear using the steering wheel gearshift paddles. In this case, segments ① light up red.

### Gearshift recommendation

The gearshift recommendation assists you in adopting an economical driving style.

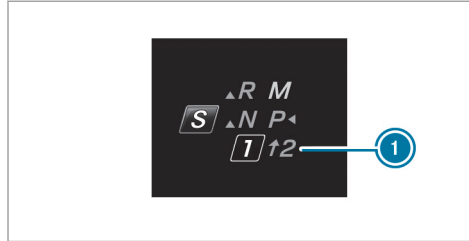

- ▶ If gearshift recommendation message ① is shown on the multifunction display, shift to the recommended gear.
- ① Gearshift recommendation is active only if you have activated manual gearshifting with the button on the center console.

### Using kickdown

- ▶ **Maximum acceleration:** depress the accelerator pedal beyond the pressure point.

During kickdown, you cannot change gears using the steering wheel gearshift paddles. The automatic transmission shifts up to the next gear


when the maximum engine speed is reached to protect the engine from overrevving.

- ① If you have activated manual gearshifting with the button in the center console, the transmission does not react to the kick-down.


### Glide mode function



With an anticipatory driving style, glide mode helps you to reduce fuel consumption.

Glide mode is characterized by the following:

- The combustion engine is switched off. All of the vehicle functions remain active.
- The  symbol will appear on the multifunction display.

Glide mode is activated if the following conditions are met:

- The ECO start/stop function is activated.
- **Mercedes-AMG E 53 4MATIC+:** Drive program  is selected with the drive setting "Moderate" or "Reduced".

- **Mercedes-AMG E 63 4MATIC+ and Mercedes-AMG E 63 S 4MATIC+:** Drive program  is selected. You have selected the "Moderate" setting for the drive in the drive program .
- The speed is within a suitable range.
- The road's course is suitable, e.g. no steep uphill or downhill inclines or tight bends.
- **Mercedes-AMG E 53 4MATIC+:** The charge level of the battery is sufficient.
- You are no longer depressing the accelerator or brake pedal.

Glide mode is deactivated again if one of the conditions is no longer met.

**Mercedes-AMG E 53 4MATIC+:** When Active Distance Assist DISTRONIC is active, Glide mode is not available.

### Driving and driving safety systems

#### Functions of ESP® (Electronic Stability Program)

**⚠ WARNING** Risk of skidding if ESP® is malfunctioning

If ESP® is malfunctioning, ESP® cannot carry out vehicle stabilization. In addition, other driving safety systems are switched off.

- ▶ Drive on carefully.
- ▶ Have ESP® checked at a qualified specialist workshop.

You can select between the following modes of ESP®:

- ESP® ON
- ESP® SPORT
- ESP® OFF

#### Characteristics when ESP® is activated


ESP® monitors and improves driving stability and traction, particularly in the following situations:

- When pulling away on wet or slippery roadways.
- When braking.
- In strong side winds when you are driving faster than 47 mph (75 km/h).

ESP® can stabilize the vehicle by intervening in the following ways:

- One or more wheels are braked.
- The engine output is adapted according to the situation.

ESP® is activated every time the engine is started regardless of whether ESP® was in ESP® SPORT or deactivated before the engine was switched off.

If the  ESP<sup>®</sup> warning lamp flashes in the instrument cluster, one or several vehicle wheels has reached its grip limit:

- Adapt the driving style to suit the prevailing road and weather conditions.
- Do not deactivate ESP<sup>®</sup> under any circumstances.
- Only depress the accelerator pedal as far as is necessary.

#### Characteristics when ESP<sup>®</sup> SPORT is activated


**⚠ WARNING** Risk of skidding if ESP<sup>®</sup> SPORT is used incorrectly

When you activate ESP<sup>®</sup> SPORT, there is an increased risk of skidding and having an accident.

- ▶ Activate ESP<sup>®</sup> SPORT only in the circumstances described below.

Select ESP<sup>®</sup> SPORT when the vehicle's own oversteering and understeering characteristics are desired, e.g. on designated roads.

Driving with ESP<sup>®</sup> SPORT or with ESP<sup>®</sup> deactivated requires an extremely qualified and experienced driver.

If ESP<sup>®</sup> SPORT is activated and one or more wheels start to spin, the  ESP<sup>®</sup> warning lamp on the instrument cluster flashes. ESP<sup>®</sup> then only stabilizes the vehicle to a limited degree.

ESP<sup>®</sup> SPORT also has the following characteristics:


- ESP<sup>®</sup> only improves driving stability to a limited degree.
- ETS/4ETS traction control is still active.
- The engine's torque is only restricted to a limited degree and the drive wheels can spin. The spinning of the wheels results in a cutting action for better traction on loose surfaces.
- ESP<sup>®</sup> continues to provide assistance when the brakes are firmly applied.
- Crosswind Assist is no longer active.

#### Characteristics when ESP<sup>®</sup> is deactivated

**⚠ WARNING** Risk of skidding if ESP<sup>®</sup> is deactivated

If you deactivate ESP<sup>®</sup>, ESP<sup>®</sup> cannot carry out vehicle stabilization.

- ▶ ESP<sup>®</sup> should only be deactivated in the following situations.

When ESP<sup>®</sup> is deactivated, the  ESP<sup>®</sup> OFF warning lamp and the **ESP OFF** message light up continuously in the instrument cluster.


Deactivating ESP<sup>®</sup> has the following effects:

- Driving stability will no longer be improved.
  - The drive wheels could spin.
  - ETS/4ETS traction control is still active.
  - Crosswind Assist is no longer active.
- i** Even when ESP<sup>®</sup> is deactivated, you are still assisted by ESP<sup>®</sup> when braking hard.

## 20 Driving and parking

It may be best to activate ESP® SPORT or deactivate ESP® in the following situations:

- When using snow chains.
  - In deep snow.
  - On sand or gravel.
- ❗ Spinning the wheels results in a cutting action, which enhances traction.
- ❗ Activate ESP® as soon as the situations described above no longer apply. ESP® will otherwise not be able to stabilize the vehicle if the vehicle starts to skid or a wheel starts to spin.

If the  ESP® warning lamp lights up continuously even when ESP® is activated, ESP® is not available due to a malfunction.

Observe any information which may be displayed in the instrument cluster:

- Warning and indicator lamps
- Display messages


### ETS/4ETS (Electronic Traction System)

ETS/4ETS traction control is part of ESP®.

ETS/4ETS can improve the vehicle's traction by intervening in the following ways:

- The drive wheels are braked individually if they spin.
- More drive torque is transferred to the wheel or wheels with traction.

### Activating/deactivating ESP® (Electronic Stability Program)

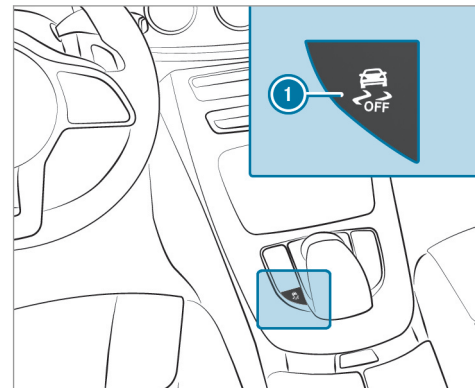


- ▶ **To activate ESP® SPORT:** briefly press button . The  and **ESP SPORT** warning lamps appear in the instrument cluster.

- ▶ **To deactivate ESP® SPORT:** briefly press button . The  and  warning lamps in the instrument cluster go out.
- ▶ **To deactivate ESP®:** press and hold button  until the  and **ESP OFF** warning lamps appear in the instrument cluster.
- ▶ **To activate ESP®:** briefly press button . The  and **ESP OFF** warning lamps go out in the instrument cluster.



Observe the information on warning lamps and display messages which may be shown in the instrument cluster.

## RACE START

### Function of RACE START

-  RACE START is available only for **Mercedes-AMG E 63 and E 63 S** models.

RACE START enables optimal vehicle acceleration from a standstill. For this, a suitably high-grip road surface is required, the tires and vehicle must also be in good condition.

-  RACE START is only available after the vehicle has been broken in (→ page 12).
-  RACE START may not be used on normal roads. RACE START must only be activated and used on dedicated race circuits, not on public roads. Be sure to read the safety notes and information on ESP® (→ page 18).






**⚠ WARNING** Risk of skidding and having an accident from wheels spinning

When you use RACE START, individual wheels could spin and you could lose control of the vehicle.

Depending on the ESP® mode selected, there is an increased risk of skidding and having an accident.

- ▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.

### Activating RACE START Requirements:

- The engine is running and the transmission and engine are at normal operating temperature.
  - The steering wheel is in the straight-ahead position.
  - The vehicle is on level ground.
  - The vehicle is stationary, the brake pedal is depressed (left foot) and the parking brake is released.
  - The transmission is in position .
  - **Mercedes-AMG E 63 S 4MATIC+:** DRIFT MODE is deactivated.
  - One of the drive programs ,  or  is selected (→ page 15).
- ▶ Rapidly depress the accelerator pedal fully. The engine speed increases.
-  If the activation conditions are not fulfilled, RACE START cannot be activated. The **RACE START Not Possible** See Operator's Manual message appears in the multifunction display.
- The doors, the hood and the trunk lid are closed.

- ▶ The **RACE START Release brake to start** message appears in the multifunction display.
- ① In this phase you can adjust RACE START depending on the road conditions: you can vary the engine speed by pulling on one of the steering wheel paddle shifters. The segments in the multifunction display flicker rapidly.
- ① If the brake pedal is not released after a short while, RACE START is canceled. The **RACE START Canceled** message appears in the multifunction display.
- ▶ Take your foot off the brake, but keep the accelerator pedal depressed. The vehicle pulls away at maximum acceleration. The **RACE START Active** message appears in the multifunction display.

RACE START is deactivated when the vehicle reaches a speed of approximately 31 mph (50 km/h).

RACE START is deactivated immediately if you release the accelerator pedal during RACE START or if any of the activation conditions are

no longer fulfilled. The **RACE START Canceled** message appears in the multifunction display.

- ① After using it several times in short succession, RACE START is unavailable until a certain distance has been driven.

### DRIFT MODE

#### Functions of DRIFT MODE

**DRIFT MODE is available only for the Mercedes-AMG E 63 S 4MATIC+ model.**

DRIFT MODE enables intentional unstable movement (drifting) and oversteering of the vehicle. All activation conditions must be fulfilled for this (ESP® deactivated, for example).

- ① Only a highly qualified and experienced driver should drive in DRIFT MODE. Be sure to read the safety notes and information on ESP® (→ page 18).

#### **⚠ WARNING** Risk of skidding and having an accident from wheels spinning

When you use DRIFT MODE, ESP® is not available. Individual wheels could spin and you could lose control of the vehicle.

There is an increased risk of skidding and having an accident.

- ▶ Do not use DRIFT MODE on normal roads.
- ▶ DRIFT MODE may only be activated and used on closed race circuits, not on public roads.
- ▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.

When DRIFT MODE is active, the vehicle drive occurs only at the rear and 4MATIC+ is deactivated.


From a speed of approximately 70 mph (115 km/h) up to 95 mph (150 km/h) 4MATIC+ is continuously reactivated. From a speed of 95 mph (150 km/h) 4MATIC+ is fully active again, ESP® however, remains deactivated.




Below a speed of 95 mph (150 km/h) to approximately 70 mph (115 km/h) 4MATIC+ is continuously deactivated again.



- ❗ DRIFT MODE is only available after the vehicle has been broken in (→ page 12).


### Activating and deactivating DRIFT MODE Requirements:

- ESP® is deactivated (→ page 20).
- Drive program  (RACE) is selected (→ page 15).
- The doors, the hood and the trunk lid are closed.
- The engine is running and the transmission and engine are at normal operating temperature.
- The transmission is in manual mode – manual shifting is activated (→ page 16).

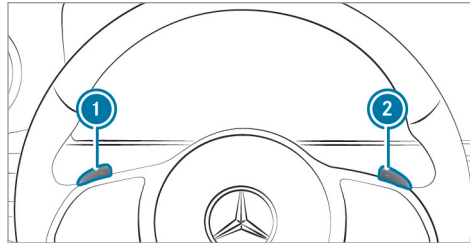
### Activating DRIFT MODE





- ▶ Pull steering wheel gearshift paddles ① and ② and hold for half a second. If all activation conditions are fulfilled, the multifunction display shows the message **DRIFT MODE Confirm: Paddle UP Cancel: Paddle DOWN** and the  warning lamp flashes.
- ▶ **To cancel:** pull steering wheel gearshift paddle ①. The multifunction display shows the **DRIFT MODE Canceled** message and the  warning lamp goes out.

- ▶ **To confirm:** pull steering wheel gearshift paddle ②. The multifunction display shows the **DRIFT MODE Active** message and the  warning lamp lights up.

### Deactivating DRIFT MODE

- ▶ Pull steering wheel gearshift paddles ① and ② and hold for half a second. The **DRIFT MODE Active** message and the  warning lamp go out.

DRIFT MODE is automatically deactivated in the following situations:

- ESP® is activated.
- Manual shifting is deactivated – the gearbox is in position .
- The  (RACE) drive program is switched off.
- The vehicle is switched off.
- Automatic switch off is required by the vehicle.

- ⓘ After drifting and before continuing the journey, check the wheels and tires for damage. In particular, check the tire tread depth and tire contact surface over the entire width of the tires (see the vehicle Operator's Manual).

### AMG adaptive sport suspension system

#### **Function of AMG adaptive sport suspension system**

The AMG adaptive sport suspension system is an air suspension system with variable damping for improved driving characteristics. The all-round level control system ensures the best possible suspension and constant ground clearance,

even with a laden vehicle. When driving at speed, the vehicle is lowered automatically to improve driving safety and to reduce fuel consumption. You also have the option of manually adjusting the vehicle level.

The damping is adjusted individually for each wheel and is influenced by the following factors:

- The driving style, e.g. sporty
- The road condition, e.g. bumps
- The individual selection of "Sport", "Sport Plus", "Comfort" or "Economy" (Mercedes-AMG E 53 4MATIC+ only)


The AMG adaptive sport suspension system includes the following components and functions:

- Air suspension with variable spring rate and automatic level control
- Speed-dependent lowering to reduce fuel consumption
- Manually selectable high level setting for greater ground clearance
- ADS PLUS (Adaptive Damping System with constant damping force adjustment)
- DYNAMIC SELECT switch and level button
- Suspension setting button


**Available suspension settings (Mercedes-AMG E 53 4MATIC+)**

Drive program	Characteristics
<b>C</b> (Comfort) <b>E</b> (Eco)	<ul style="list-style-type: none"><li>• The suspension setting is comfortable.</li><li>• The vehicle is set to the normal level.</li><li>• When driving at speeds above 100 mph (160 km/h) the vehicle is lowered.</li><li>• When driving at speeds below 87 mph (140 km/h), the vehicle is raised again.</li></ul>
<b>S</b> (Sport)	<ul style="list-style-type: none"><li>• The suspension setting is firmer.</li><li>• The vehicle is set to the low level.</li><li>• The vehicle is not lowered any further if you are traveling at higher speeds.</li></ul>
<b>S<sup>+</sup></b> (Sport Plus)	<ul style="list-style-type: none"><li>• The suspension setting is even firmer.</li><li>• The vehicle is set to the low level.</li><li>• The vehicle is not lowered any further if you are traveling at higher speeds.</li></ul>

## Available suspension settings (Mercedes-AMG E 63 4MATIC+ and Mercedes-AMG E 63 S 4MATIC+)

Drive program	Characteristics
<b>C</b> (Comfort)	<ul style="list-style-type: none"> <li>• The suspension setting is comfortable.</li> <li>• The vehicle is set to the normal level.</li> <li>• When driving at speeds of above 130 mph (210 km/h) the vehicle is lowered.</li> <li>• When driving at speeds below 75 mph (120 km/h) the vehicle is raised again.</li> <li>• 4MATIC+ is dynamically synchronized.</li> </ul>
<b>S</b> (Sport)	<ul style="list-style-type: none"> <li>• The suspension setting is firmer.</li> <li>• The vehicle is set to the normal level.</li> <li>• When driving at speeds of above 130 mph (210 km/h) the vehicle is lowered.</li> <li>• When driving at speeds below 75 mph (120 km/h) the vehicle is raised again.</li> <li>• 4MATIC+ is dynamically synchronized.</li> </ul>
<b>S+</b> (Sport Plus) <b>Mercedes-AMG E 63 S 4MATIC</b> +:  (RACE)	<ul style="list-style-type: none"> <li>• The suspension setting is even firmer.</li> <li>• The vehicle is set to the low level.</li> <li>• The vehicle is not lowered any further if you are traveling at higher speeds.</li> <li>• 4MATIC+ is more dynamically synchronized.</li> </ul>

### Selecting the AMG adaptive sport suspension system setting

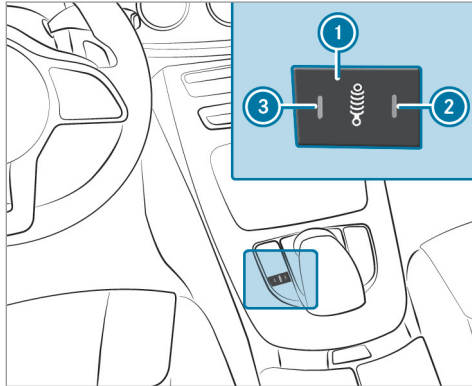

- ▶ **COMFORT suspension setting:** press button ① repeatedly until indicator lamps ② and ③ go out. The **AMG Suspension System COMFORT** message appears in the multifunction display.

The driving characteristics of your vehicle are comfortable.

- ▶ **SPORT suspension setting:** press button ① repeatedly until indicator lamp ③ lights up. The **AMG Suspension System SPORT** message appears in the multifunction display. The suspension is adapted to be firmer.
- ▶ **SPORT+ suspension setting:** press button ① repeatedly until indicator lamps ② and ③ light up. The **AMG Suspension System SPORT +** message appears in the multifunction display. The suspension is adapted to be very firm.

### Setting the vehicle level

- ▲ **WARNING** Risk of accident because vehicle level is too high

If you drive at a higher vehicle level, the driving characteristics may be impaired due to the higher vehicle center of gravity.

The vehicle can drift outwards, for example, when steering or cornering.

- ▶ Always choose a vehicle level which is suited to the driving style and the road surface conditions.

- ▲ **WARNING** Risk of entrapment from vehicle lowering

When lowering the vehicle, people could become trapped if their limbs are between the vehicle body and the tires or underneath the vehicle.

- ▶ Make sure no one is underneath the vehicle or in the immediate vicinity of the wheel arches when the vehicle is being lowered.

- ▲ **WARNING** Risk of becoming trapped due to the vehicle lowering

**Vehicles with AIR BODY CONTROL or level control system:** when you unload luggage or leave the vehicle, the vehicle first rises slightly and then returns to the set level shortly afterwards.

You or anyone else in the vicinity of the wheel arches or the underbody could thus become trapped.


The vehicle can also be lowered after being locked.

- ▶ When leaving the vehicle, make sure that nobody is in the vicinity of the wheel arches or the underbody.

**Requirements:**

- The vehicle has been started.
- The vehicle must not be moving faster than 40 mph (65 km/h).

**Raising the vehicle**

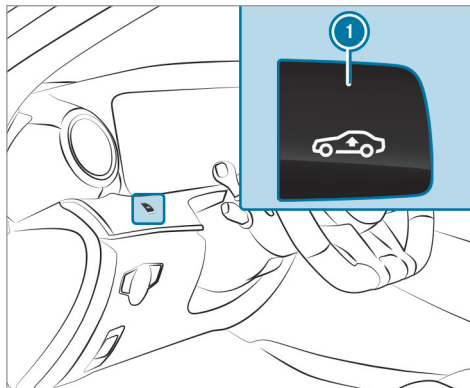

- ▶ Press button ①.  
The vehicle is raised to the high level.

Your selection is saved.

The vehicle is lowered again in the following situations:


- **Mercedes-AMG E 63 4MATIC+ and E 63 S 4MATIC+:** When driving faster than 75 mph (120 km/h).
- **Mercedes-AMG E 63 4MATIC+ and E 63 S 4MATIC+:** When driving between 50 mph (80 km/h) and 75 mph (120 km/h) for approximately three minutes.
- **Mercedes-AMG E 53 4MATIC+:** When driving faster than 62 mph (100 km/h).
- **Mercedes-AMG E 53 4MATIC+:** When driving between 50 mph (80 km/h) and 62 mph (100 km/h) for approximately three minutes.
- After selecting a drive program using the DYNAMIC SELECT switch.

The vehicle is adjusted to the height of the last active drive program.

**Lowering the vehicle**

- ▶ Press button ①.  
The vehicle is adjusted to the height of the last active drive program.

### Function of the AMG steering-wheel buttons

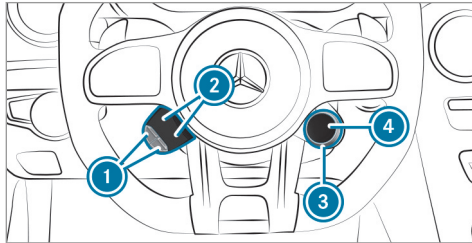

The AMG steering-wheel buttons are two additional control elements on the steering wheel.

You can assign two vehicle functions of your choice to the left control element. You can change between the available functions by pressing display buttons ② repeatedly. The currently selected functions are displayed in display buttons ②.


The following functions are available:

- ESP®(→ page 18)

- AMG adaptive sport suspension system(→ page 24)
- AMG Performance exhaust system (→ page 14)
- ECO start/stop function (→ page 13)
- Manual gearshifting (→ page 16)




If you have assigned a function to one of display buttons ②, you can operate this function with corresponding button ①.

The assignment of display buttons ② remains stored even after a new engine start, but the operating status of the respective function is reset to the basic setting.

You can change between the drive programs with stabilizer bar actuator ③. The selected drive program appears in display button ④. By pressing display button ④, you can directly access the drive program  (**Individual**) (→ page 15).

### Notes on the Instrument Display and on-board computer

Additional notes regarding your Mercedes-AMG vehicle:

- **Vehicles with an Instrument Display (standard) only:** if you select the **Performance** menu, the upshift bar, the transmission set-up **M** (manual) and the current gear will appear on the multifunction display.
- If you switch on the ECO start/stop function and select drive program **C**, the engine electronics will switch from eight-cylinder mode to four-cylinder mode, if necessary. The multifunction display will show the  symbol in the status area.
- Additional note regarding the indicator and warning lamps: the vehicle is also equipped with the ESP<sup>®</sup> ON, ESP<sup>®</sup> OFF  and ESP<sup>®</sup> SPORT  indicator and warning lamps (→ page 49).
- You can select the following display content in vehicles with a Widescreen Cockpit:
  - Tachometer (classic display setting)

- Date (progressive display setting)
- Gear display
- Warm-up
- Track Pace
- G-meter
- Engine data
- Trip computer
- Navigation

### Operating the on-board computer

**⚠ WARNING** Risk of distraction from information systems and communications equipment

If you operate information and communication equipment integrated in the vehicle when driving, you will be distracted from the traffic situation. This could also cause you to lose control of the vehicle.


- ▶ Only operate this equipment when the traffic situation permits.

▶ If you cannot be sure of this, stop the vehicle whilst paying attention to road and traffic conditions and operate the equipment with the vehicle stationary.

Observe the legal requirements for the country in which you are currently driving when operating the on-board computer.

**i** The on-board computer displays will appear on the multifunction display.



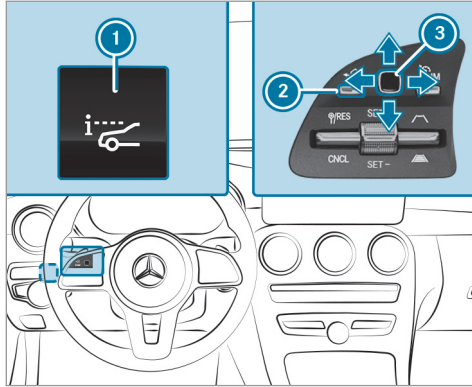

The on-board computer is operated using left-hand Touch Control ③ and left-hand back/home button ②.

When the on-board computer is being operated, different acoustic signals will sound as operating feedback, e.g. when the end of a list is reached or when you are scrolling through a list.

The following menus are available:

- [Service](#)


- [DriveAssist](#)
- [Performance](#)
- [Trip](#)
- [Navigation](#)
- [Radio](#)
- [Media](#)
- [Phone](#)
- [Head-up Disp.](#)

• **Vehicles with an Instrument Display in the Widescreen Cockpit:** [Designs](#)

**Vehicles with an Instrument Display (standard) only:** If you select the [Performance](#) menu, the upshift bar, the transmission set-up **M** (manual) and the current gear will appear on the multifunction display.

The menus can be called up from the menu bar on the multifunction display.

- ▶ **To call up the menu bar:** press back button on the left ② until the menu bar is displayed.

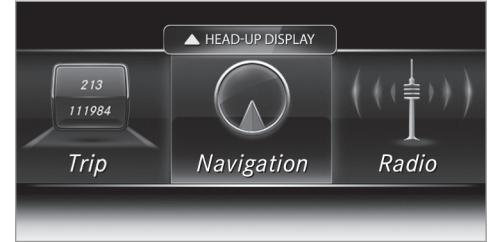

- ▶ **To scroll in the menu bar:** swipe left or right on left-hand Touch Control ③.
- ▶ **To call up a menu or confirm a selection:** press left-hand Touch Control ③.
- ▶ **To scroll through displays or lists on the menu:** swipe upwards or downwards on left-hand Touch Control ③.
- ▶ **To call up a submenu or confirm a selection:** press left-hand Touch Control ③.
- ▶ **To exit a submenu:** press back button on the left ②.

### Selecting the Head-up Display

#### ▶ If the Head-up Display is switched off:

press button ❶.

The Head-up Display will be switched on.

or

#### ▶ If the Head-up Display is switched on:

swipe upwards on left-hand Touch Control ❸.

The Head-up Display will be activated.

#### ▶ To select what the Head-up Display shows:

swipe upwards or downwards on left-hand Touch Control ❸.

### Calling up displays on the Performance menu

On-board computer:

↳ Performance


#### ▶ To select a display:

swipe upwards or downwards on the left-hand Touch Control.

Displays on the Performance menu:

- Warm-up
- SETUP

- G-Meter
- RACETIMER (vehicles without AMG TRACK PACE)
- Engine data

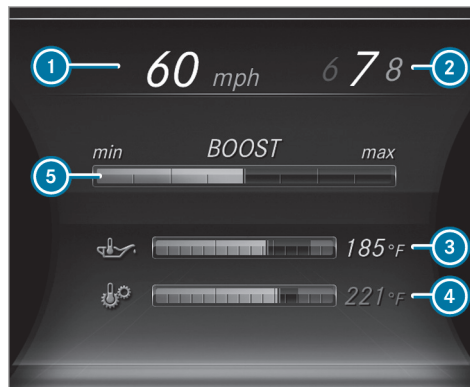

Warm-up (example)

- ❶ Digital speedometer
- ❷ Gear display
- ❸ Engine oil temperature

- ❹ Transmission oil temperature
- ❺ Boost pressure


If the engine or transmission is not at operating temperature, the multifunction display will show temperature ❸ or ❹ in blue. Avoid using the full engine power output during this time.



Example: SETUP

- ❶ Drive system setting:  
Reduced/Moderate/Sport/Dynamic/Race
- ❷ Exhaust system:  
Balanced/Powerful
- ❸ ESP® status:

- On/Off
- ④ Transmission position:  
D/M
- ⑤ Suspension tuning:  
Comfort/Sport/Sport+

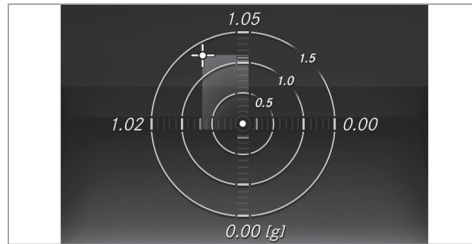


G-meter (example)

While the vehicle is in motion, the G-meter shows the forces that are exerted on the vehicle occupants both laterally and in the direction of travel. The maximum values appear in red in the coordinate system.

- ▶ **To reset the G-meter:** press the left-hand Touch Control.
- ▶ Select **Yes**.
- ▶ Press the left-hand Touch Control.

If you press and hold the left-hand Touch Control, the function will be reset immediately.

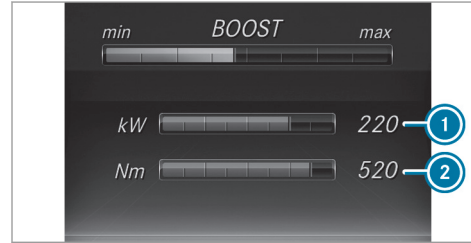

Engine data (example)

- ① Current power output
- ② Current torque

### Displaying and starting RACE TIMER on the Performance menu


On-board computer:

↳ Performance

- ① The RACE TIMER function is available only in vehicles without AMG TRACK PACE.

The following functions are possible in the RACE TIMER:

- Selecting displays and starting
- Stopping
- Starting a new lap
- Displaying lap statistics
- Resetting

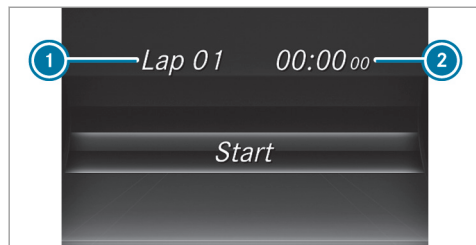


- ① Lap
- ② Lap time

RACE TIMER is intended only for use on designated race tracks. Do not use the function on public roads.

- ▶ **To select a display and start:** swipe up or down on the left-hand Touch Control.
- ▶ Press the left-hand Touch Control.
- ▶ Select **Start** and press the left-hand Touch Control.
- ▶ **To stop:** select **Stop** and press the left-hand Touch Control.

- ▶ **To start a new lap:** after the first stored lap, press the left-hand Touch Control.
- ▶ Select **New Lap**.  
A maximum of 32 laps may be stored.

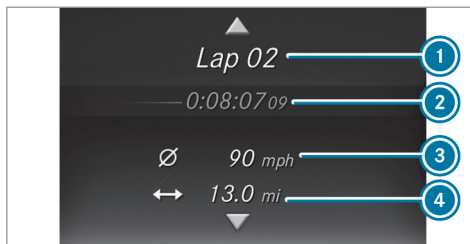

Example: RACE TIMER

- ① Lap
- ② Elapsed time
- ③ Average speed
- ④ Distance covered

- ▶ **To display the lap statistics:** after at least two stored laps, press the left-hand Touch Control.


- ▶ Select **Lap List**.  
The lap statistics will be displayed.
- ▶ Display the statistics for the next lap by swiping up or down on the left-hand Touch Control.  
The fastest lap is indicated by flashing text ①.
- ▶ **To reset:** stop RACE TIMER and press the left-hand Touch Control.
- ▶ Select **Reset** and press the left-hand Touch Control.  
All laps will be deleted.

#### Function of the Head-up Display

The Head-up Display projects the following content into the driver's field of vision:

- Information from the navigation system
- Information from the driver assistance systems
- Some warning messages

## Mercedes-AMG display content

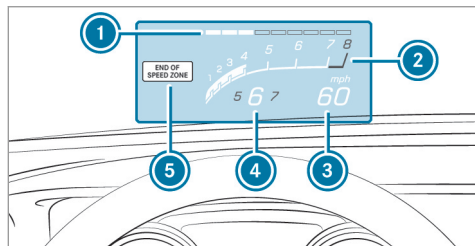


- ① Protection from reaching the overrevving range
- ② Current engine speed
- ③ Current speed
- ④ Currently selected gear, gearshift options with manual shifting
- ⑤ Detected instructions and traffic signs

Depending on the vehicle's equipment, you can select further AMG displays in addition to the standard displays on the [Display Content](#) menu. If you select RACETIMER, the Head-up Display will show the lap and lap time.

In vehicles with AMG TRACK PACE, you can also display additional content depending on the setting:

- Speed and gear display
- Lap and sector times
- Acceleration and braking
- Track layout graphics

When you receive a call, the  **Incoming Call** message will appear on the Head-up Display.

In audio mode, the station name or track will be shown temporarily when the audio source is being actively operated.

### System limitations

The visibility is influenced by the following conditions:

- Seat position
- The positioning of the display image
- Light conditions
- Wet roads
- Objects on the display cover
- Polarization in sunglasses

- ① In extreme sunlight, sections of the display may appear washed out. You can correct this by switching the Head-up Display off and on again.

## AMG TRACK PACE

### General information

With AMG TRACK PACE, the driving characteristics on race tracks can be analyzed and optimized. You can drive previously stored race tracks (e.g. Hockenheimring), or new tracks can be recorded and stored. The driven lap times are stored for every track. These can be analyzed and compared to other lap times to achieve the best possible race results. Additionally, acceleration and braking procedures can be measured and stored.

**Please note:** Use AMG TRACK PACE only on closed-off routes outside the public traffic area. Adapt your driving style to your personal abilities and the environmental conditions. As the driver, you are solely responsible for driving your vehicle. Park your vehicle safely before operating the application.

### Setting Track Race


Multimedia system:

↳ Vehicle ▶ TRACK PACE ▶ Track Race

#### Recording a track

- ▶ Select **Record Track**.
- ▶ At the desired starting point, select **Start Record**.  
The track recording starts at this point. During track recording, sectors can be set to determine intervals.
- ▶ To finish track recording, select **Stop** or cross the starting line again.
- ▶ Enter the weather and the track name.

#### Searching by track name

- ▶ Select **All Tracks**.
- ▶ Select  **Search**.
- ▶ Enter the track name.  
Tracks with the searched name are displayed.

### Measuring the time on the track

- ▶ Select **Timing**.  
An overview of nearby tracks appears. The distance and direction to the starting line of the track is displayed.
- ▶ Select the desired track.  
If you have already driven on this track, you can select a driven time as a reference time.


Timekeeping begins automatically when the starting line has been crossed.

- ⓘ When **Zoom** is selected, the track display can be switched from 2D to 3D.

#### Displaying the analysis

- ▶ Select **Lap Times**.  
An overview of all the driven tracks appears.
- ▶ Select a track.  
The following data is displayed:
  - Lap and sector times
  - Average and maximum permissible speed
  - Driver
  - Vehicle

- Date
  - Weather
- ▶ Select a desired lap.  
The analysis is displayed.

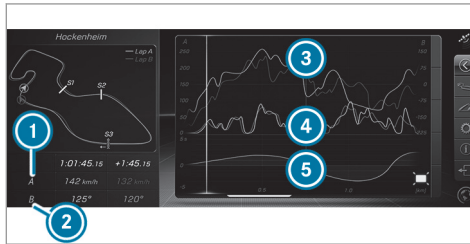

- 1 Parameter 1 (e.g. speed)
- 2 Parameter 2 (e.g. steering angle)
- 3 Speed trend (Parameter 1)
- 4 Steering angle trend (Parameter 2)
- 5 Time difference between lap A and B (only when two laps are selected).

**i** The following values can be set for parameters 1 and 2, for example:

- Speed
- Longitudinal/lateral acceleration
- Steering angle
- Engine speed
- Engine oil/tire temperature

Based on the analysis you can check and optimize driving characteristics for any position on the track.

### Exporting tracks or races (USB)

- ▶ Select **All Tracks**.  
An overview of all stored tracks and races appears.
- ▶ Highlight desired tracks or races.
- ▶ Select Options.
- ▶ Select **Export**.  
The selected tracks or races can be exported to a USB storage device connected to the vehicle.

### Editing tracks and recordings

- ▶ Select **All Tracks**.
  - ▶ Highlight the desired track.
  - ▶ Select options.
  - ▶ Select **Rename** or **Delete**.
- or
- ▶ Select a track.
  - ▶ Highlight the desired recording.
  - ▶ Select options.
  - ▶ Select **Weather** or **Delete**.

### Setting Drag Race

Multimedia system:

**Vehicle** ▶ **TRACK PAGE** ▶ **Drag Race**

### Measuring acceleration

- ▶ Select **Acceleration**.  
Measurement begins when the vehicle accelerates. Measurement is incremental, in steps of 30 mph (50 km/h) to a maximum of 180 mph (300 km/h) or up to the set maximum speed.

Measurement can be stopped early by selecting **Stop** or by stopping the vehicle.

### Quarter-mile race

▶ Select **Quarter Mile**.  
The time measurement runs until a mile has been traveled or a previously set distance (e.g. 1/4 mile, 1/3 mile or 1/2 mile) has been reached.

❶ The possible values for setting the end distance are determined by the system and cannot be freely chosen.

Measurement can be stopped early by selecting **Stop** or by stopping the vehicle.

### Manual start for acceleration and quarter-mile race

▶ Select **Acceleration** or **Quarter Mile**.  
▶ Select **Manual start**.  
Three red traffic lights appear one after the other. The reaction time measurement starts when they change to green at the same time. The reaction time is displayed as soon as you drive off. If you drive off too early, the message **Jump start** will appear and acceleration

or quarter mile measurement will be canceled.

### Measuring braking

▶ Select **Braking**.  
▶ Select **Start Record**.  
Measurement is incremental, in steps of 30 mph (50 km/h) to a standstill. If the braking procedure is started e.g. at a speed of 99 mph (160 km/h), measurement starts as soon as 90 mph (150 km/h) has been reached.

### Storing and calling up measurement values

When a measurement has been completed or canceled, the measured time can be stored.

▶ After a measurement, select **Save measurement?** .

The stored measurements can be displayed via the **History** menu item.

### Editing measurements

▶ Select **History**.  
▶ Highlight the desired measurement.

▶ Select  options.

▶ Select **Weather** or **Delete**.

❶ The measurements can be displayed by category, e.g. acceleration measurements, by applying a filter.

### Calling up the telemetry display

Multimedia system:

↳ **Vehicle** ▶ **TRACK PACE** ▶ **Telemetry**

The telemetry display shows current vehicle data as a digital value and as a diagram. Up to four parameters can be selected that are to be shown in the display.

For example:

- Engine speed
- Wheel angle
- Speed
- Steering angle

▶ Set the desired parameters.



- ▶ Set the time.  
The set parameters are evaluated in the diagram for the time set.
- ⓘ The time can range between 30 seconds and a maximum of 20 minutes.

### Configuring AMG TRACK PACE

#### Requirements

##### To use the TRACK PACE app:

- The TRACK PACE app is installed on the mobile end device.
- The mobile end device is connected to the multimedia system via Wi-Fi.

Multimedia system:

↳ **Vehicle** ▶▶ **TRACK PACE** ▶▶ **Options**

#### Setting driver profiles

- ▶ Select **Driver Profile**.
- ▶ Create a new driver profile.

or

- ▶ Select an existing driver profile.  
The driver profile is activated.

- ⓘ Tracks, laps and times driven are assigned to the active driver profile while driving. For an exact evaluation of your driving style, you should always drive with an active driver profile.

#### Displaying driver profile statistics

- ▶ Select **Driver Profile**.
- ▶ Select the desired profile.

The following information is displayed for the selected driver profile:

- Driving time
- Track driven
- Number of Track Races, Drag Races and laps driven
- Maximum speed

#### Connecting a mobile device via the TRACK PACE app

The TRACK PACE app makes it possible to record videos and to synchronize them with stored tracks.

- ▶ Select the **TRACK PACE App**.  
Already authorized devices are displayed in the list.
- ▶ Select **Authorize new device**.  
Available devices are displayed.
- ▶ Start the TRACK PACE app on the device to be connected and follow the instructions.
- ▶ Confirm the authorization prompt.
- ▶ Enter the code displayed on the device.  
The device is authorized.

or

- ▶ Select a device that is already authorized.  
The device is de-authorized.

#### Setting the TRACK PACE display in the head-up display

- ▶ Select **HUD Contents**.
- ▶ Activate  or deactivate  the desired contents.  
The contents in the Head-up Display are adapted.

- ⓘ For further information on the Head-up Display, see (→ page 34).

### Setting acoustic feedback

▶ Select [Acoustic feedback](#).

The following settings are available:

- [Loud](#)
- [Medium](#)
- [Quiet](#)
- [Off](#)

▶ Select a setting.

### Activating/deactivating additional information

▶ Activate  or deactivate  [Display help](#).

When additional information is activated, popups provide information on the individual menus.

▶ Confirm popups with [OK](#) or select [Do not display](#).

### Calling up information

▶ Select [Info](#).

The following information is displayed:


- Software version
- Memory used

- Total number of tracks saved
- Total number of races driven

## Flat tire

### TIREFIT kit storage location

The TIREFIT kit is located under the trunk floor.

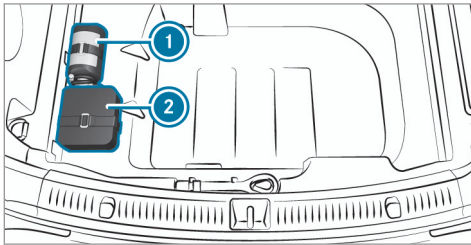

- ① Tire sealant bottle
- ② Tire inflation compressor


### Overview of the tire-change tool kit

Apart from some country-specific variants, vehicles are not equipped with a tire-change tool kit. For more information on which tire-changing tools are required and approved for performing a wheel change on your vehicle, consult a qualified specialist workshop.

You require the following tools, for instance, to change a wheel:


- Jack
- Chock
- Lug wrench
- Alignment bolt

The tire-change tool kit is located under the trunk floor.

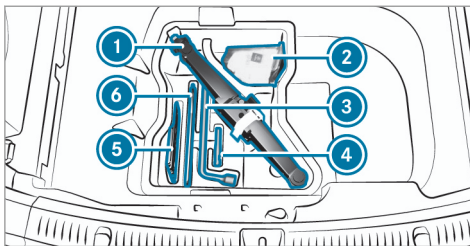

- ① Jack
- ② Gloves
- ③ Lug wrench
- ④ Alignment bolt
- ⑤ Folding chock
- ⑥ Ratchet for jack

### Setting up the folding chock

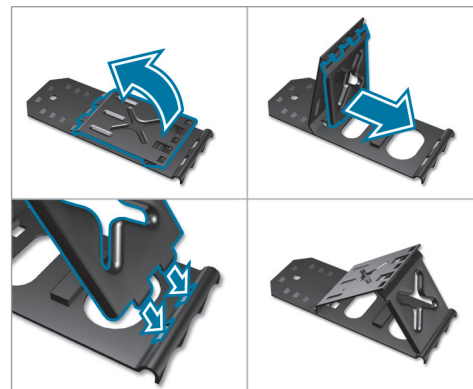

### Changing a wheel

- ▶ Be sure to also observe the notes on changing a wheel in the Operator's Manual of your vehicle.

**Vehicles with AMG ceramic high-performance composite braking system:**

**!** **NOTE** Damage to the ceramic brake disk when changing a wheel

**Mercedes-AMG vehicles with ceramic brake disks:** during removal and repositioning of the wheel, the wheel rim may strike the ceramic brake disk and damage it.

- ▶ Take particular care.
  - ▶ Ask another person for assistance or use a second centering pin.
- ▶ When changing the wheel, avoid exerting any force on the brake discs.  
This can lead to impaired comfort during braking.

## Operating fluids

### Fuel

#### Information on fuel grades for Mercedes-AMG vehicles

Observe the information on operating fluids in the vehicle Operator's Manual.

**!** **NOTE** Damage caused by the wrong fuel

Even small amounts of the wrong fuel could result in damage to the fuel system, the engine and the emission control system.

- ▶ Only refuel with low-sulfur unleaded fuel.

This fuel may contain up to 10% ethanol by volume. Your vehicle is suitable for use with E10 fuel.

Never refuel with one of the following fuels:

- Diesel
- Gasoline with more than 10% ethanol by volume, e.g. E15, E85, E100

- Gasoline with more than 3% methanol by volume, e.g. M15, M30, M85, M100
- Gasoline with additives containing metal

If you have accidentally refueled with the wrong fuel:

- ▶ Do not switch the ignition on.
- ▶ Consult a qualified specialist workshop.

If the available fuel is not sufficiently low in sulfur, this can produce unpleasant odors.

Only refuel using unleaded premium grade gasoline with at least 91 AKI/95 RON.

As a temporary measure, if the recommended fuel is not available, you may also use unleaded regular gasoline which has at least the octane number specified in the information label in the fuel filler flap (see the vehicle Operator's Manual).

Never refuel using gasoline with an even lower RON.

**!** **NOTE** Premature wear through unleaded regular gasoline

Unleaded regular gasoline can cause the engine to wear more quickly and impair longevity and performance.

If unleaded premium grade gasoline is unavailable and you have to refuel using unleaded regular gasoline:

- ▶ Only fill the fuel tank to half full with unleaded regular gasoline and fill up as soon as possible with unleaded premium grade gasoline.
- ▶ Do not drive at the maximum design speed.
- ▶ Avoid sudden acceleration and engine speeds over 3000 rpm.

Further information on fuel is available at the following locations:

- At a gas station
- At a qualified specialist workshop
- On the <https://www.mbusa.com> (USA only)

## Tank content and fuel reserve

### Capacity

Model	Total capacity
All models	21.1 gal (80.0 liters)
Model	Of which reserve
All models	3.2 gal (12.0 liters)

### Quality and capacity of engine oil

#### MB-Freigabe or MB-Approval

Gasoline engines	Engine oil specifications
Mercedes-AMG E 53 4MATIC+	229.51, 229.52, 229.61, 229.71*
All other models	229.5*, 229.51

\* Recommended for lowest possible fuel consumption (lowest SAE viscosity class in each

case; observe possible restrictions of the approved SAE viscosity classes).

To achieve the lowest possible fuel consumption, it is recommended to use the engine oil specifications marked in the table for the lowest SAE viscosity class. Possible restrictions of the approved SAE viscosity classes must be observed.

**Mercedes-AMG E 63 4MATIC+ and Mercedes-AMG E 63 S 4MATIC+:** only use engine oils of viscosity class SAE 0W-40 or SAE 5W-40.

The following values refer to an oil change, including the oil filter.

### Capacity

Model	Capacity
Mercedes-AMG E 53 4MATIC+	9.0 US qt (8.5 liters)
All other models	9.5 US qt (9.0 liters)

### Coolant capacity

#### Capacity

Model	Capacity
Mercedes-AMG E 53 4MATIC+	14.8 US qt (14.0 liters)
Mercedes-AMG E 63 4MATIC+	14.1 US qt (13.3 liters)
Mercedes-AMG E 63 S 4MATIC+	16.2 US qt (15.3 liters)

### Refrigerant filling capacity

#### Filling capacity for refrigerant and PAG oil

Model	Refrigerant
Mercedes-AMG E 53 4MATIC+	20.8 ± 0.4 oz (590 ± 10 g)
All models	22.2 ± 0.4 oz (630 ± 10 g)

## 46 Technical data


Model	PAG oil
Mercedes-AMG E 53 4MATIC+	4.2 ± 0.4 oz (120 ± 10 g)
All other models	2.8 ± 0.4 oz (80 ± 10 g)

### Vehicle data

#### Vehicle dimensions

The heights specified may vary as a result of the following factors:

- Tires
- Load
- Condition of the suspension
- Optional equipment

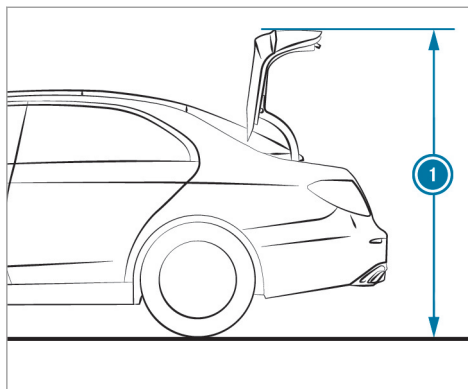

Missing values were not available at the time of going to press.

#### Height when opened

Model	① Height when opened
Mercedes-AMG E 53 4MATIC+	
All other models	72.8 in (1848 mm)

#### Vehicle dimensions

Mercedes-AMG E 53 4MATIC+	
Vehicle length	194.6 in (4942 mm)
Vehicle width including outside mirrors	81.3 in (2065 mm)
Vehicle height	57.0 in (1447 mm)



**Mercedes-AMG E 53  
4MATIC+**

Wheelbase	115.7 in (2939 mm)
Turning radius	41.0 ft (12.50 m)
<b>All other models</b>	
Vehicle length	196.6 in (4993 mm)
Vehicle width including outside mirrors	81.3 in (2065 mm)
Vehicle height	57.5 in (1460 mm)
Wheelbase	115.7 in (2939 mm)
Turning radius	41.0 ft (12.50 m)

**Weights and loads**

Please observe the following notes for the specified vehicle data:


- Items of optional equipment increase the curb weight and reduce the payload.

**Roof load****All models**

Maximum roof load	220.5 lb (100 kg)
-------------------	-------------------

## Display messages

### Driving systems


Display messages	Possible causes/consequences and ► Solutions
RACE START Not Possible See Operator's Manual	<ul style="list-style-type: none"> <li>* Possible causes:               <ul style="list-style-type: none"> <li>• The activation conditions have not been fulfilled (→ page 21).</li> </ul> </li> </ul>
RACE START Canceled	<ul style="list-style-type: none"> <li>* Possible causes:               <ul style="list-style-type: none"> <li>• You released the accelerator pedal during RACE START.</li> <li>• You depressed the brake pedal during RACE START.</li> </ul> </li> </ul> <p>You can try RACE START again at the next start.</p>
DRIFT MODE Currently Unavailable See Operator's Manual	<ul style="list-style-type: none"> <li>* Possible causes:               <ul style="list-style-type: none"> <li>• The activation conditions have not been fulfilled (→ page 23).</li> </ul> </li> </ul>
 Malfunction Drive at Max. 50 mph	<ul style="list-style-type: none"> <li>* The AMG adaptive sport suspension system is malfunctioning. The vehicle's handling characteristics may be affected.               <ul style="list-style-type: none"> <li>► Do not drive at speeds greater than 50 mph (80 km/h).</li> <li>► Consult a qualified specialist workshop.</li> </ul> </li> </ul>

## Vehicle

Display messages	Possible causes/consequences and ► Solutions
Electronic Rear Axle Differential Lock Inoperative	<ul style="list-style-type: none"> <li>* The electronic rear axle locking differential is inoperative.               <ul style="list-style-type: none"> <li>► Consult a qualified specialist workshop.</li> </ul> </li> </ul>
Electronic Rear Axle Differential Lock Currently Unavailable	<ul style="list-style-type: none"> <li>* The motor of the electronic rear axle locking differential is overheating.               <ul style="list-style-type: none"> <li>► Let the electronic rear axle locking differential cool down by driving defensively.</li> </ul> </li> </ul>

## Warning and indicator lamps


## Driving safety systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 <p>ESP® OFF warning lamp</p>	<p>The yellow ESP® OFF warning lamp is lit while the engine is running.</p> <p>*ESP® is deactivated.</p> <div style="border: 1px solid gray; padding: 5px; margin-top: 10px;"> <p><b>▲ WARNING</b> Risk of skidding when driving with ESP® deactivated</p> <p>If ESP® is deactivated, ESP® cannot carry out vehicle stabilization. The availability of further driving safety systems is also limited.</p> </div>

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	<ul style="list-style-type: none"> <li>► Drive on carefully.</li> <li>► Only deactivate ESP® for as long as the situation requires.</li> </ul> <p>If ESP® cannot be activated, ESP® is malfunctioning.</p> <ul style="list-style-type: none"> <li>► Have ESP® checked immediately at a qualified specialist workshop.</li> </ul> <p>► Observe the notes on deactivating ESP® (→ page 18).</p>
<div style="border: 1px solid black; padding: 5px; display: inline-block; margin-bottom: 5px;"><b>ESP SPORT</b></div> ESP® SPORT warning lamp	<p>ESP® SPORT is activated while the engine is running.</p> <p>*When ESP® SPORT is activated, ESP® will stabilize the vehicle only to a limited extent.</p> <div style="background-color: #f0f0f0; padding: 5px; margin: 5px 0;"> <p><b>▲ WARNING</b> Risk of skidding if ESP® SPORT is used incorrectly</p> </div> <p>When you activate ESP® SPORT, there is an increased risk of skidding and having an accident.</p> <ul style="list-style-type: none"> <li>► Activate ESP® SPORT only in the circumstances described below.</li> </ul> <p>► Observe the notes on activating ESP® SPORT(→ page 18).</p>
<div style="border: 1px solid black; padding: 5px; display: inline-block; margin-bottom: 5px;"><b>DRIFT</b></div> DRIFT warning lamp	<p>DRIFT MODE is activated while the engine is running.</p>

Warning/indicator lamp	Possible causes/consequences and ► Solutions
	<p>* <b>▲ WARNING</b> Risk of skidding and having an accident from wheels spinning</p> <p>When you use DRIFT MODE, ESP® is not available. Individual wheels could spin and you could lose control of the vehicle.</p> <p>There is an increased risk of skidding and having an accident.</p> <ul style="list-style-type: none"> <li>▶ Do not use DRIFT MODE on normal roads.</li> <li>▶ DRIFT MODE may only be activated and used on closed race circuits, not on public roads.</li> <li>▶ Make sure that no persons or obstacles are in the close vicinity of your vehicle.</li> </ul> <p>▶ Observe the notes on activating DRIFT MODE (→ page 22).</p>

## Driving systems

Warning/indicator lamp	Possible causes/consequences and ► Solutions
 <p>Suspension warning lamp</p>	<p>The yellow AMG adaptive sport suspension system warning lamp is lit.</p> <p>* There is a malfunction in the AMG adaptive sport suspension system.</p> <p>▶ Note the messages on the multifunction display.</p>

- A**
- Acceleration**  
see Kickdown
- AMG**  
Menu (on-board computer) ..... 30  
Steering wheel control element ..... 29  
Steering-wheel buttons ..... 29
- AMG adaptive sport suspension system** ..... 27  
Selecting the suspension setting ..... 27  
Setting ..... 27  
Suspension ..... 24
- AMG ceramic high-performance composite brake system** ..... 14
- AMG Performance adjustable exhaust system** ..... 14  
Function ..... 13  
Operating ..... 14
- AMG performance seat**  
Setting ..... 11
- AMG Performance steering wheel** ..... 29
- AMG TRACK PACE**  
Configuring ..... 39
- Drag Race ..... 37  
General information ..... 36  
Telemetry display ..... 38  
Track Race ..... 36
- Authorized Mercedes-Benz Center**  
see Qualified specialist workshop
- Authorized workshop**  
see Qualified specialist workshop
- Automatic engine start (ECO start/stop function)** ..... 13
- Automatic engine stop (ECO start/stop function)** ..... 13
- Automatic transmission**  
Drive programs ..... 14, 15  
DYNAMIC SELECT switch ..... 14, 15  
Kickdown ..... 17  
Manual gearshifting ..... 16  
Oil temperature (on-board computer, Performance menu) ..... 32  
Steering wheel paddle shifters ..... 16
- B**
- Boost pressure (on-board computer, Performance menu)** ..... 32
- Brakes**  
AMG ceramic high-performance composite brake system ..... 14  
New/replaced brakepads/brake discs ..... 12  
Notes on breaking-in a new vehicle ..... 12
- C**
- Changing a wheel**  
Removing a wheel ..... 42
- Changing gears** ..... 16  
Manually ..... 16
- Chock** ..... 42  
Storage location ..... 42
- Chock**  
see Chock
- Climate control**  
Filling capacity for PAG oil ..... 45  
Refrigerant filling capacity ..... 45
- Cockpit** ..... 4  
Overview ..... 4
- Comfort mode**  
see AMG adaptive sport suspension system

**Computer**  
see On-board computer


**Coolant (engine)**  
Filling capacity ..... 45

## D

**Dashboard**  
see Cockpit

**Dealership**  
see Qualified specialist workshop

## Display messages

-  Malfunction Drive at Max. 50  
mph ..... 48
- DRIFT MODE Currently Unavailable  
See Operator's Manual ..... 48
- Electronic Rear Axle Differential Lock  
Currently Unavailable ..... 49
- Electronic Rear Axle Differential Lock  
Inoperative ..... 49
- RACE START Canceled ..... 48

RACE START Not Possible See Oper-  
ator's Manual ..... 48

**Drag Race**  
Setting ..... 37

**DRIFT MODE**  
Activating ..... 23  
Activation conditions ..... 23  
Deactivating ..... 23  
Function ..... 22

**Drive programs**  
see DYNAMIC SELECT

**Driving safety system**  
ESP® (Electronic Stability Program) ..... 18

**Driving system**  
AMG adaptive sport suspension sys-  
tem ..... 24

**Driving tips**  
AMG ceramic high-performance  
composite brake system ..... 14  
Notes on breaking-in a new vehicle ..... 12

**Dynamic data**  
Displaying ..... 16

**DYNAMIC SELECT** ..... 14, 15  
Drive programs ..... 14, 15  
Function ..... 14, 15

## E

**E10** ..... 44

**ECO start/stop function** ..... 13  
Automatic engine start ..... 13  
Automatic engine stop ..... 13  
Method of operation ..... 13

**Emotion Start**  
Starting the vehicle ..... 12

**Engine**  
ECO start/stop function ..... 13

**Engine oil**  
Capacity ..... 45  
MB-Freigabe or MB-Approval ..... 45  
Quality ..... 45  
Temperature (on-board computer,  
Performance menu) ..... 32

**ESP® (Electronic Stability Program)**  
Activating/deactivating ..... 20  
ESP® SPORT ..... 18

- |   |    |   |        |
|---|----|---|--------|
| Function/notes .....  | 18 | <b>Glide mode</b> .....                         | 17     |
| Status display (on-board computer,<br>Performance menu) .....         | 32 |   |        |
| <b>ESP® SPORT</b>   |    | <b>H</b>  |        |
| Function/notes .....  | 18 | <b>Head-up Display</b>                          |        |
|   |    | Function .....                                  | 34     |
| <b>F</b>  |    | <b>I</b>  |        |
| <b>Fuel</b>   |    | <b>Instrument display</b>                       |        |
| E10 .....   | 44 | AMG displays .....                              | 30     |
| Flexible fuel vehicles .....  | 44 |   |        |
| Fuel reserve .....  | 45 | <b>J</b>  |        |
| Gasoline .....  | 44 | <b>Jack</b>                                     |        |
| Quality (gasoline) .....  | 44 | Storage location .....                          | 42     |
| Sulfur content .....  | 44 |   |        |
| Tank content .....  | 45 | <b>K</b>  |        |
|   |    | <b>Kickdown</b> .....                           | 17     |
| <b>G</b>  |    | Using .....                                     | 17     |
| <b>G-meter (on-board computer, Per-<br/>formance menu)</b> .....      | 32 | <b>L</b>  |        |
| <b>Gasoline</b> .....   | 44 | <b>Limited Warranty</b>                         |        |
| <b>Gear display (on-board computer, Per-<br/>formance menu)</b> ..... | 32 | Vehicle .....                                   | 9      |
| <b>Gearshift recommendation</b> .....                                 | 17 | <b>Locking differential</b>                     |        |
|   |    | see Rear axle locking differential              |        |
|   |    | <b>M</b>  |        |
|   |    | <b>Menu (on-board computer)</b>                 |        |
|   |    | AMG displays .....                              | 30     |
|   |    | Overview .....                                  | 30     |
|   |    | Performance .....                               | 30, 32 |
|   |    | <b>N</b>  |        |
|   |    | <b>Notes on breaking-in a new vehicle</b> ..... | 12     |
|   |    | <b>O</b>  |        |
|   |    | <b>On-board computer</b> .....                  | 30     |
|   |    | AMG menu .....                                  | 30     |
|   |    | Menu overview .....                             | 30     |
|   |    | Operating .....                                 | 30     |
|   |    | Performance menu .....                          | 30, 32 |
|   |    | <b>Operating fluids</b>                         |        |
|   |    | Fuel (gasoline) .....                           | 44     |
|   |    | <b>Operating safety</b>                         |        |
|   |    | Information .....                               | 7      |
|   |    | <b>Operating system</b>                         |        |
|   |    | see On-board computer                           |        |
|   |    | <b>Operator's Manual</b>                        |        |
|   |    | Vehicle equipment .....                         | 7      |



**P**

- Performance (on-board computer, Performance menu)** ..... 32
- Power output (on-board computer, Performance menu)** ..... 32

**Q**

- Qualified specialist workshop** ..... 8

**R****RACE START**

- Activating ..... 21
- Activation conditions ..... 21
- Function ..... 21

- RACETIMER (on-board computer, Performance menu)** ..... 33

- Rear axle locking differential** ..... 13

**Reserve**

- Fuel ..... 45

- Roof load** ..... 47

**S****Seat belts**

- Reduced protection ..... 10

**Selecting a gear**

- see Changing gears

**Service center**

- see Qualified specialist workshop

- SETUP (on-board computer, Performance menu)** ..... 32

**Shift paddles**

- see Steering wheel paddle shifters

**Shifting gears**

- Gearshift recommendation ..... 17

- Specialist workshop** ..... 8

**Sport Plus suspension setting**

- see AMG adaptive sport suspension system

**Sport suspension setting**

- see AMG adaptive sport suspension system

**Sports exhaust**

- see AMG Performance adjustable exhaust system

**Start/Stop button**

- Emotion Start ..... 12

**Start/stop function**

- see ECO start/stop function

- Steering wheel paddle shifters** ..... 16

- Sulfur content** ..... 44

**Suspension**

- AMG adaptive sport suspension system ..... 24
- Selecting the suspension setting ..... 27
- Setting the suspension level ..... 27

**Suspension level**

- Setting ..... 27

**T****Tank content**





- Fuel ..... 45
- Reserve (fuel) ..... 45

**Telemetry display**

- Calling up ..... 38

**Temperature**

- Engine oil (on-board computer, Performance menu) ..... 32

- Transmission oil (on-board computer, Performance menu) ..... 32
- Tire inflation compressor**  
see TIREFIT kit
- Tire-change tool kit**  
Overview ..... 42
- TIREFIT kit** ..... 41  
Storage location ..... 41
- Tires**  
Installing ..... 42  
Removing ..... 42
- Tool**  
see Vehicle tool kit
- Torque (on-board computer, Performance menu)** ..... 32
- Touch Control**  
On-board computer ..... 30
- Track Race**  
Setting ..... 36
- Trunk lid**  
Opening dimensions ..... 46
- V**
- Vehicle**  
Correct use ..... 9  
Equipment ..... 7  
Limited Warranty ..... 9  
Qualified specialist workshop ..... 8  
Starting (Emotion Start) ..... 12
- Vehicle data**  
Roof load ..... 47  
Turning circle ..... 46  
Vehicle height ..... 46  
Vehicle length ..... 46  
Vehicle width ..... 46  
Wheelbase ..... 46
- Vehicle dimensions** ..... 46
- Vehicle tool kit** ..... 41  
TIREFIT kit ..... 41
- W**
- Warm-up (on-board computer, Performance menu)** ..... 32
- Warning/indicator lamp**  
 DRIFT warning lamp ..... 50
-  ESP® OFF warning lamp ..... 49
-  ESP® SPORT warning lamp ..... 50
-  Suspension warning lamp ..... 51
- Warranty** ..... 9
- Wheel change**  
Mounting a new wheel ..... 42
- Wheels**  
Installing ..... 42  
Removing ..... 42
- Workshop**  
see Qualified specialist workshop